


1. Place

• Place a piece of paper under the Cyclex[®] frame.

• Place a marker at the edge of the pattern you wish to make.

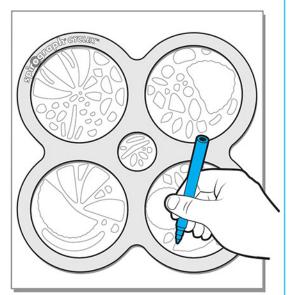


You can also draw Cyclex[®] designs with your own pens or colored pencils. Try them out to add different colors and details!

Place a protective layer such as a placemat or pad of paper underneath your drawing area to protect surfaces.

2. Trace

• Hold the marker vertically to the inside edge of the stencil shape.


• Holding the frame in place with your free hand, trace the outline of the shape around and around until your line meets where it began.

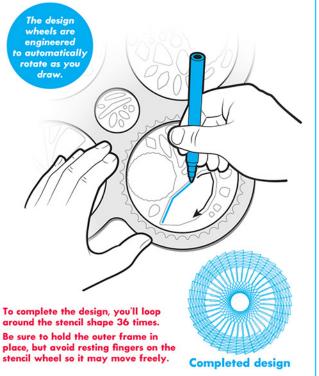



3. Repeat


• To add to your design, keep the Cyclex[®] frame in place on the paper and choose another stencil shape in the same wheel.

• Use a different color to draw a new pattern on top of the first.

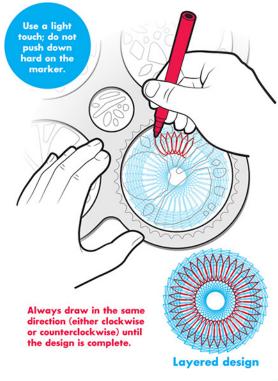

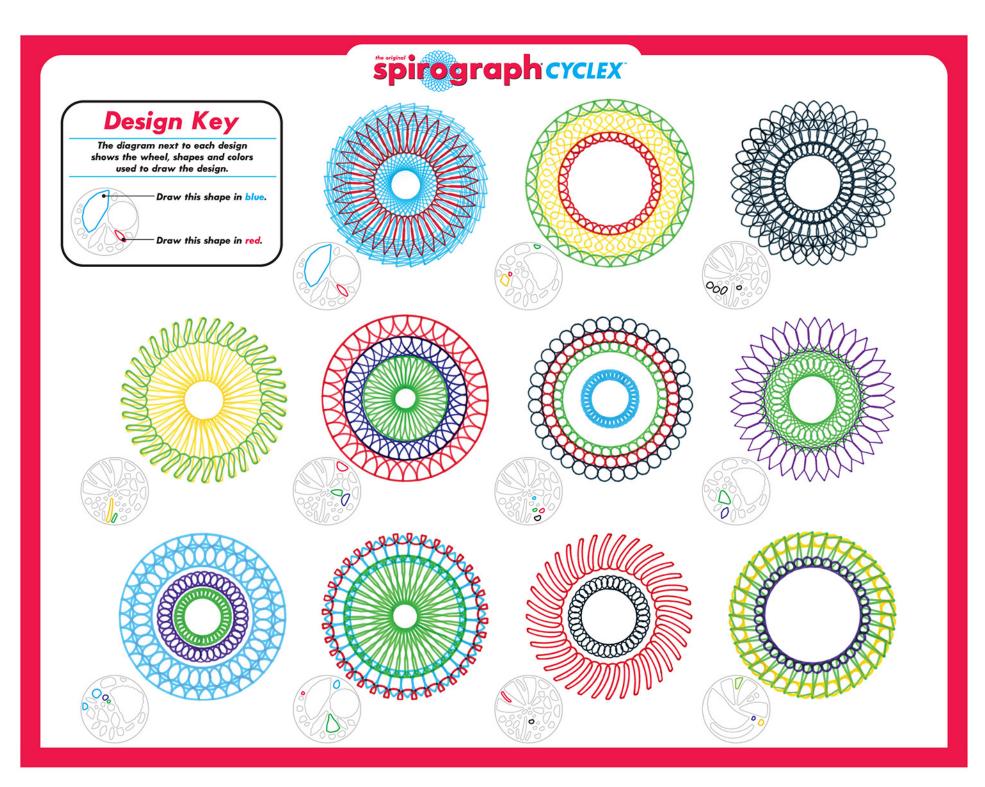

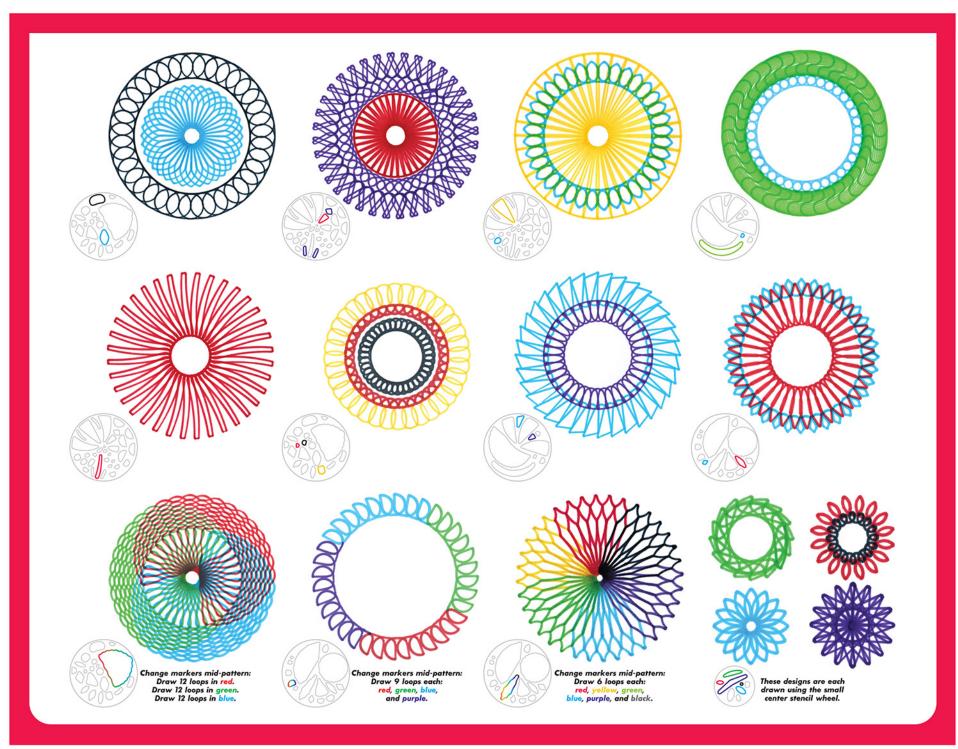

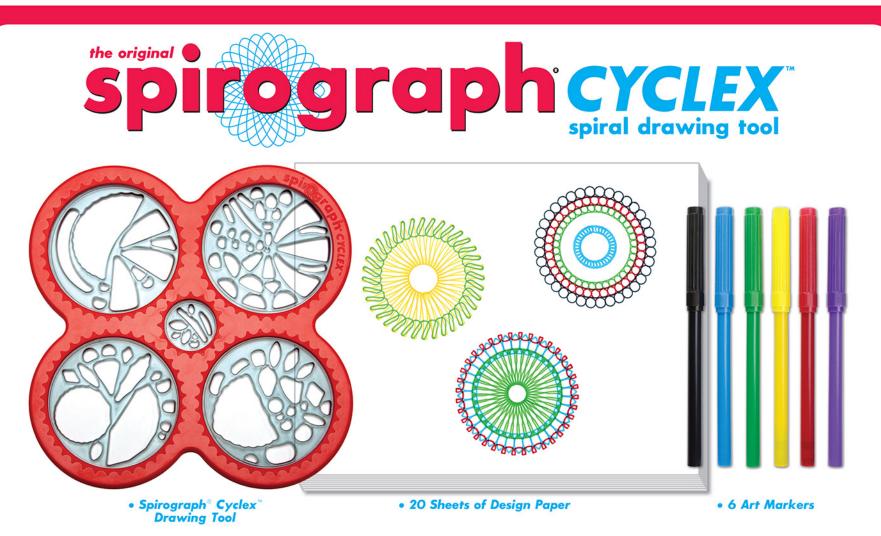

The amazing Spirograph[®] Cyclex[™] drawing tool makes it simple for kids of all ages to create intricate and beautiful spiral art designs and patterns. Created by Denys Fisher, the inventor of the original Spirograph[®], the Cyclex[™] takes the Spirograph[®] drawing method to a whole new level. The unique rotating stencil wheels of the Cyclex[™] make it easy and fun to create incredible detailed designs.



HASBRO and its logo, SPIROGRAPH® and its logo, are trademarks of Hasbro and are used with permission. ©2014 HASBRO. All Rights Reserved. Manufactured and Distributed by Kahootz, LLC. • 2014 Kahootz, LLC • 772 Airport Boulevard, Suite 1 • Ann Arbor, MI 48108 www.KahootzToys.com • www.OriginalSpirograph.com

Product and colors may vary. The Spirograph® Cyclex® Drawing Tool works with most pens, pencils, and fine-tip markers found in the market. Place a protective layer such as a placemat or pad of paper underneath your drawing area to protect surfaces. Marker inks may stain some surfaces and fabrics.

