



# MEET WIGGLEBUG

your child's new  
best friend

GLO FRIENDS

GLOWORM

PLAYSKOOL

2+

## SOCIAL EMOTIONAL LEARNING


The Social Emotional Learning elements of Wiggiebug are included in the activities your child can do with Wiggiebug. **Free Play** and **Wiggle Hop Stop** can help your child release any extra energy they might have and practice calming techniques to move from high activity to low activity. **Calm/Story Mode** presents an engaging, quiet-time activity that can help a child work through difficult emotions and reach a place of quiet reflection.

To get the most out of the SEL features, **use Wiggiebug often with your child.** Emotional development takes time and practice, which is exactly what Wiggiebug is there to help with. Using the different modes frequently for fun and play will help your child know how to use Wiggiebug when they really need to.

for more information on Glo friends and SEL, visit:




## SET UP

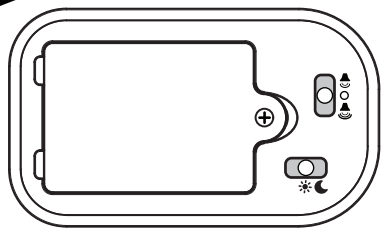

Access the control switches by opening the hook tape in bottom of Wiggiebug.

Switch **MODE** to Play position. ☀

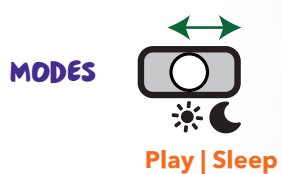

## PLAY MODES

PRESS WIGGLEBUG'S FOOT

to cycle through the  
different play modes.



You'll know Wiggiebug is on and ready to play when you hear:

"HELLO!  
I'm so happy  
to see you!"

### WIGGLE HOP STOP MODE

At the start of the **Wiggle, Hop, Stop!** game, Wiggiebug will say,

**"Wiggle, Hop, stop!"**

Follow Wiggiebug's instructions to move around and let out all your energy, then freeze! Wiggiebug notices when your child follows the instructions and gives verbal praise for listening and following along.



### CALM/STORY MODE

At the start of **Calm Mode**, Wiggiebug will say,

**"Let's be calm..."**

Listen to Wiggiebug play soothing sounds and talk your child through imaginative stories.



### FREE PLAY MODE

At the start of **free Play Mode**, Wiggiebug will say,

**"Let's play!"**

In **free Play Mode**, there are lots of actions your child can do with Wiggiebug! Try different things and see what Wiggiebug says!

#### ACTIONS TO TRY:

- Hold Wiggiebug upside down
- Rub Wiggiebug's belly
- Hop like a bunny
- Fly Wiggiebug through the air like an airplane
- Give Wiggiebug a hug
- Spin Wiggiebug



### SLEEP MODE



Use the switch on Wiggiebug's battery pack to change Wiggiebug from Play Mode to **Sleep Mode**.





When you switch Wiggiebug into **Sleep Mode**, you will get to pick between several soothing sounds to accompany Wiggiebug's glow. Press Wiggiebug's foot to switch between beach, rain, outside, and lullaby sounds for one that your child enjoys listening to.

**After 10 minutes in Sleep Mode, Wiggiebug will automatically turn off to conserve batteries.**





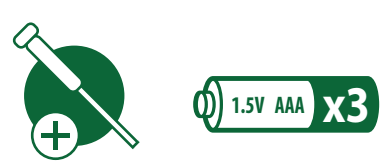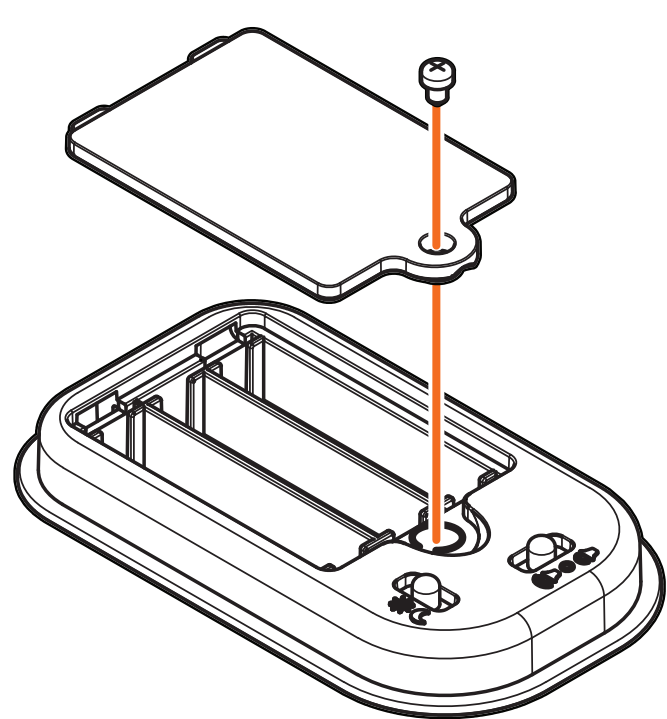

## REPLACING THE BATTERIES

- Open the bottom to access the battery compartment.
- Remove the screw(s) with a small Phillip screwdriver.
- Open the lid and replace the 3 "AAA" batteries.
- Close the lid and insert the screw(s).

## BATTERY SAFETY INFORMATION

- Adult supervision is recommended when inserting and removing batteries
- Do not use rechargeable batteries
- Do not mix old (used) and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries
- Do not attempt to recharge non-rechargeable batteries
- Batteries are to be inserted with the correct polarity (+ and -)
- Remove and properly dispose of exhausted batteries (recycle if possible)
- Do not short-circuit the supply terminals
- Do not dispose of batteries in fire as they may explode or leak
- Remove batteries from the product when not in use for extended periods of time

### FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.


These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a power source that is different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- CAN ICES-003(B)/NMB-003(B)

Item: 1983

## WASHING INSTRUCTIONS

 Due to Wigglebug's unique sensors, DO NOT put Wigglebug in the wash. If Wigglebug gets dirty, spot clean and air dry only.



For more fun, visit [playmonster.com](https://www.playmonster.com)

If you have questions, please contact us.  
[playmonster.com/contact-us](https://www.playmonster.com/contact-us)  
800-524-4263 • Weekdays 8am to 5pm CST



© 2022 PlayMonster Group LLC, 1400 E. Inman Pkwy., Beloit, WI 53511 USA. Made in China. **HASBRO**, **GLO WORM**®, **PLAYSKOOL**® and all related trademarks and logos are trademarks of Hasbro Inc. © 2022 Hasbro. Licensed by Hasbro. Parts and colors may vary from those shown.

Instructions must be retained since they contain important information.